

SureColor F-Series Dye Sublimation

Epson is recommending the following instructions to safely store the SureColor F-Series of Dye-Sublimation printers will not be in use for two weeks or longer.

SureColor F570, F6070, and F6200 printer models:

- Remove paper from the printer and store paper in original packaging
- Power down the printer from the control panel
- Cover the printer to prevent dust from accumulating

SureColor F6370 printer model:

- Remove paper from the printer and store paper in original packaging
- From the printer's **Maintenance Menu**, select **Head Cap Cleaning** and follow the instructions onscreen. Note: A Cap Cleaning Maintenance Kit (C13S210053) will be required for this step
- Power down the printer from the control panel
- Cover the printer to prevent dust from accumulating

SureColor F7070, F7170, F7200, F9200, F9370, F9470, and F9470H printer models

- Remove paper from the printer and store paper in original packaging
- From the printer's **Maintenance Menu**, select **Head Maintenance** and follow the instructions onscreen
- Using a cleaning swab included with the printer maintenance kit, clean around the perimeter of the print head to remove any debris
- [F7xxx and F9200 series printers only] Clean the parking caps using the Cap Cleaning Maintenance liquid (C13S210053) to remove any buildup of debris. A video demonstrating <https://www.youtube.com/watch?v=6SiV4loP9Hw>
- Power down the printer from the control panel
- Cover the printer to prevent dust from accumulating

For detailed instructions, please review the information in the printer user guide.

SureColor F570 – <https://files.support.epson.com/docid/cpd5/cpd57984.pdf>

SureColor F6070 – <https://files.support.epson.com/pdf/scf6070/scf6070ug.pdf>

SureColor F6200 – <https://files.support.epson.com/docid/cpd4/cpd43466.pdf>

SureColor F6370 – <https://files.support.epson.com/docid/cpd5/cpd57331.pdf>

SureColor F7070 – <https://files.support.epson.com/docid/cpd3/cpd38753.pdf>

SureColor F7170 – <https://files.support.epson.com/docid/cpd4/cpd40250.pdf>

SureColor F7200 – <https://files.support.epson.com/docid/cpd4/cpd43454.pdf>

SureColor F9200 – <https://files.support.epson.com/docid/cpd4/cpd43460.pdf>

SureColor F9370 – <https://files.support.epson.com/docid/cpd5/cpd54298.pdf>

SureColor F9470 / F9470H – <https://files.support.epson.com/docid/cpd5/cpd58101.pdf>